

SUBMITTAL DATA SKU: D1030-R-NFPA-PRO-DRD

30" PRE-ENGINEERED RANGE HOOD

BASE MODEL: D1030-R-NFPA-PRO

Job Name:	Date:	
Reference:	Unit Location:	Prepared By:
Engineer:	Contractor:	_ Approval:
Expected Job Date:	Notes:	
MODEL FAN OPTIONS Integral Fans: ☐ F - Recirculating ☒ R - Rear D Top Discharging External Fans: ☐ FBO - Fan by SELECT OPTIONAL ACCESSORIES		Mounted Fan 🔲 WF - Wall Mounted Fan
ADA: ADA Fan/Light Control	□ MACM: Make-I	Jp Air Control Module
CC: Custom Color – (Stainless Standard)	_	ockbox Pro with integrated ADA
TANK-E: Test Tank	· · · · · · · · · · · · · · · · · · ·	and Light Strobe Alarm
MPK: Manual Pull Station	_	· ·
RANGE FUEL SOURCE DISCONNECT OPTIO G: 3/4" NPT Natural Gas (DED Needed if to be Controlled on a Gas Range)	Electric Components Need DED: Dual Elem	nent (includes 3/4" NPT Natural Gas and Electric) - B, 220VAC O 5-20R, 120VAC
E: Electric -		eptacle -
O 14-50R, 220VAC O 6-20R, 220V O 10-50R, 220VAC O 5-20R, 120V O 5-15R, 120VAC		, 220VAC O 5-15R, 120VAC O 5-20R, 120VAC
ELECTRIC NEMA (RECEPTACLE) OPTIONS		
	G G G G W -50R 6-20R 5-15R C 50AMP 220VAC 20AMP 120VAC 15AM	5-20R

REQUIREMENTS

Hood shall:

- Be D1000 Series by DENLAR Fire Protection
- Be wall mounted so that the bottom of the mounting bracket sits 24" to 30" above the range
- Be of stainless-steel construction (#18 & #20 GA, polished 304) with no sharp edges and brushed finish
- Have factory installed fire suppression system
- Have 212° F degree fusible link (30") which will activate the mechanical fire suppression system
- Have wet chemical extinguishing agent: Low PH Amerex
 660 (pressurized potassium citrate / potassium acetate mix)
- Have centrifugal fan with air delivery

- Be ETL listed, tested to UL300A standard
- Fan motor shall be permanently lubricated and meet UL507 standard
- Include a power disconnect for gas and/or electric appliances, deactivated at suppression system discharge
- Automatically disconnect range element once a certain preset temperature is reached or under particular predefined events or conditions
- Unit shall have multiple alarm contacts pre-installed (local, remote and trouble alarms) and an audible buzzer
- Lighting shall be by LED bulb







Contact factory for any special circumstances









BASE MODEL: D1030-R-NFPA-PRO




GENERAL FEATURES

- ETL/CSA listed
- 304 Brushed Stainless Steel
- Fail-Safe mechanical actuation
- Two step pre-suppression
- Plenum nozzle
- Main power switch and reset switch
- Service switch


- Pressure switch
- Pressure gauge
- Temperature switches
- Hard wired fuel source disconnect
- Dry alarm contacts
- On board diagnostics
- Status LED

- Trouble signal
- Service key
- Audible buzzer (90db)
- LED bulb
- Grease baffle with drip tray
- Integrated ADA light and fan controls through ClockBox Pro

UNIT DIMENSIONS

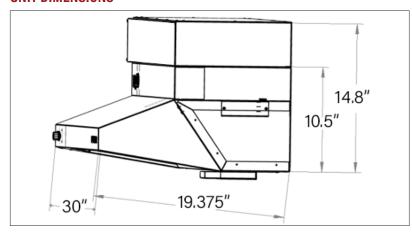

REQUIRED FOR ALL MODELS

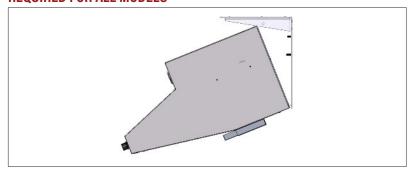

The main unit requires clearance to tilt to a 45° degree angle for maintenance purposes

SPECIFICATIONS

Compliance	UL300A, NSF, UL507, and NFPA101, ADA compliant
Weight	75 lbs
Mounting Configuration	Wall
Min / Max Install Height Above Top of Residentail Range / Cook Top	24" - 30"
Voltage	120 AC
Phase	1
Hz	60 Hz
Amps	4 Amps
Circuit Breaker Size	15-20 Amps
Operating Current	3.7 Amps
Fan Operating Current	3.45 Amps
Output Operating Current	0.25 to 0.5 Amps
Input Wiring	Power Cord
Output Wiring	14/2 MC Wire
Fan Type	Rear Discharging (Fan is Internal)
МОСР	15 Amps
Duct Type	See Local Codes
Fire Control	Programmable Logic Controller
Tank Type	Stainless Steel
Tank Pressure	102+-8% Psi
Tank Volume	1300 mL
Suppression Agent	Low pH Wet Chemical Amerex 660
No. of Nozzles / Spray	5 / 60 Degree Conical

















BASE MODEL: D1030-R-NFPA-PRO

NOZZLE PLACEMENT

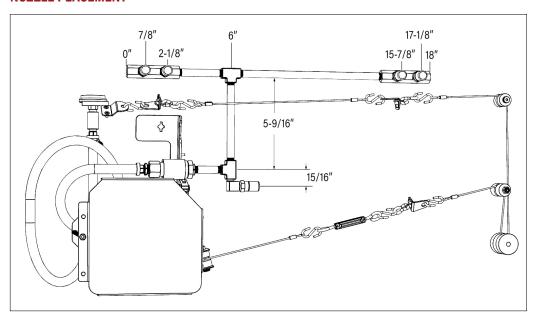

TOP DUCTED EXHAUST

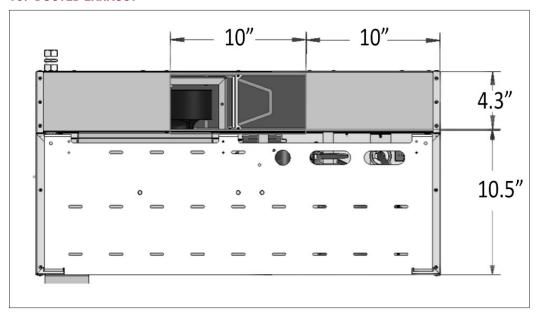














DUAL RECEPTACLE POWER SOURCE DISCONNECT: -DRD (D1000)


RECEPTACLE DIMENSIONS

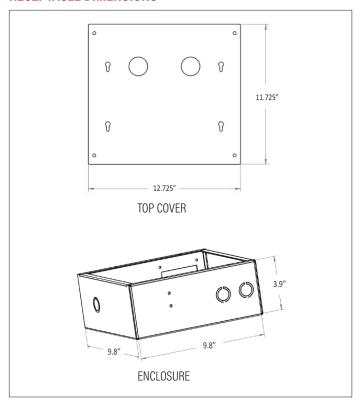

SPECIFICATIONS

Models	-DRD 6-20 -DRD 5-20 -		-DRD 5-15
NEMA	6-20R	5-20R	5-15R
Output Volts	220 AC	120 AC	120 AC
Output Current	20 Amps	20 Amps	15 Amps
Coil Voltage	120 AC		
Phase	1		
Material	Galvenized		
Frequency	60 Hz		
Fuse	0.5 Amps		
Fuse Type	5 X 20mm cartridge		
Operating Current	0.25 Amps		

SCHEMATIC

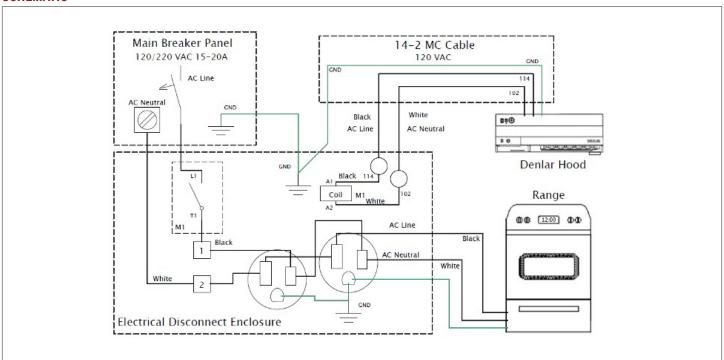







FAN: -R-NFPA (PRO) 30"


UNIT DIMENSIONS

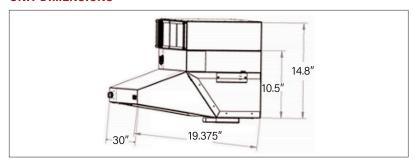

30" EXHAUST FAN REAR VIEW DIMENSIONS

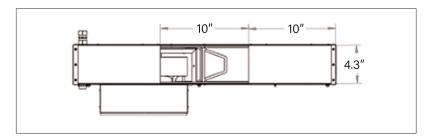

TOP DISCHARGING MOUNTING BRACKET (D1000-BPSF-NFPA)

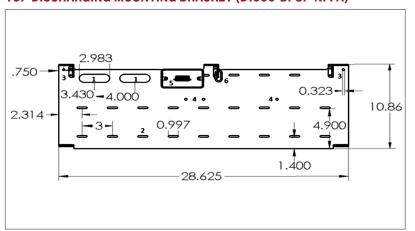


	Back Plate Support Layout
1	Cut-outs for Wire Entry
2	Mounting Holes
3	Top Mounting Holes
4	1/4-20 Studs for Securing Hoods to D1000-BPSF-NFPA
5	Handy box for Power In and Power Out
6	Quick Link Safety Cable Holder

SPECIFICATIONS

Style	Rear Discharge
Туре	Integral to Hood
Weight	22 lbs
Operating Current	3.1 Amps
Voltage	120 AC
Phase	1
Frequency	60 Hz
CFM + -2.5% (Low-High)	174 - 519
Pressure (In Water)	-0.251.35
dBA (Low-High)	60 - 80
Hood Outlet (LxH)	10 in x 4.25 in
Duct	4 in - 24 in
Fan Inlet	9.8 in x 9.7 in
Fan Outlet	10 in x 4.25 in
Control	Electronic Control Module (ECM)
Speeds	Variable

SAMPLE EXHAUST LAYOUT

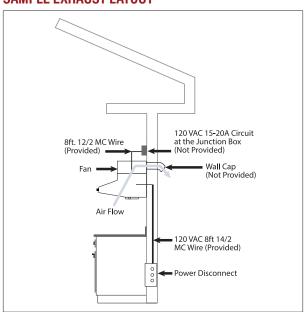



CLOCKBOX PRO™: -CLBX-PRO




SPECIFICATIONS

Mounting	Surface Mount or Flush Mount
Weight	18 lbs
Voltage	120 VAC
Phase	1
Frequency	60 Hz
Breaker Size (Amps)	15 A
Operating Current (Amps)	0.1 A
Fuse (Amps)	1 A
Output Current Maximum (Amps)	10 A
Touch Screen Voltage	24 DC
Conduit	25 ft 16 mm Flexible ENT Conduit

FEATURES

Two Hou	Password Protected	Adjustable Time	Change Password	ADA Compatible	Language Selection	Input/Output To A Monitoring Station/ Alarm System	Interacts with Hood	Displays User Instructions	Displays Hood Faults	Locks Out if There is a Fault with the Hood
Υ	Υ	Υ	Υ	Υ	Υ	Υ	Υ	Υ	Υ	Υ

UNIT DIMENSIONS

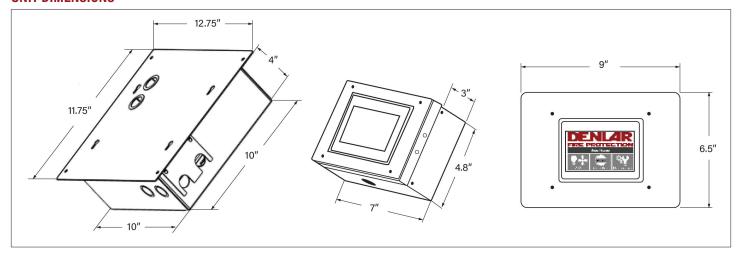






CLOCKBOX PRO™: -CLBX-PRO

SCHEMATIC

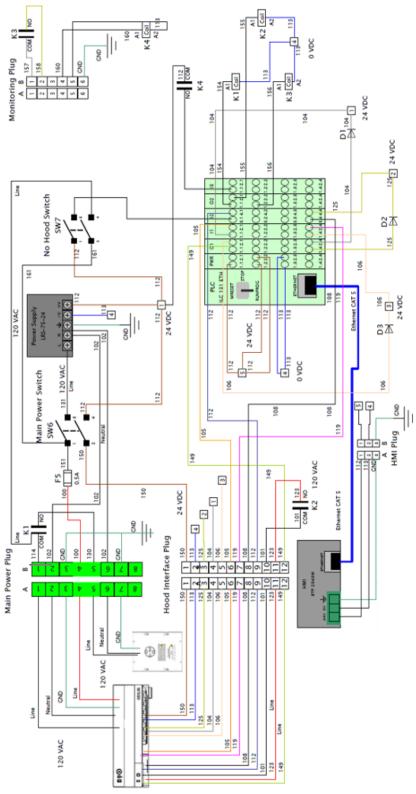





MANUAL PULL STATION: -MPK (D1000)

THE D1000-MPK COMES EQUIPPED WITH THE FOLLOWING



1x Enclosure 4" x 1.5" Octagon Metal Box



Station Face Plate



1x 1/2" ENT **Conduit Connector**







3x 90 Degree Corner Pulleys



1x 25' Stainless-Steel Cable with Clevis Pin

36" MODEL PULL-PIN LOCATION

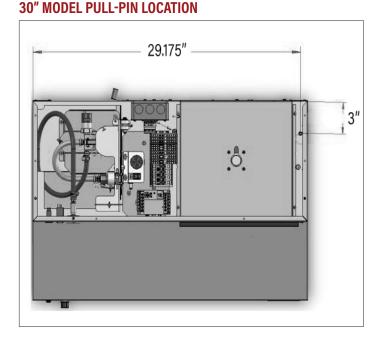

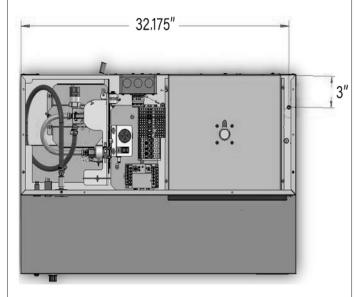


The Manual Pull Station (D1000-MPK) is designed to discharge the D1000 Model when a user pulls the tab from the Manual Pull Station Face Plate. The D1000-MPK is provided with 25 feet Stainless-Steel Cable and with three 90 Degree Corner Pulleys. It is required to have 7-10 inches

extra Stainless-Steel Cable at the Pull Station Box.



ALARM: INTEGRATED TO D1000

ALARM LOCATION

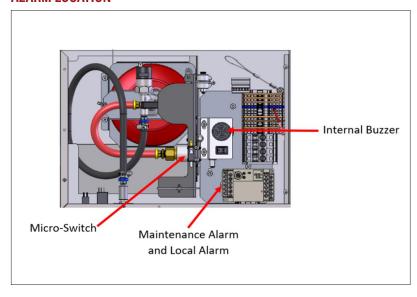


INTERNAL BUZZER SPECIFICATIONS

Туре	Audible
Decibels	90
Location	Top center of main unit
Activates upon	Tank discharge hose disconnected, low pressure in tank, or high temp fault (190° F at hood)

MAINTENANCE ALARM SPECIFICATIONS

Туре	Dry Contact
Type of Contacts	Com / NO
Contact Amperage	5 Amps
Location	PLC contacts C0 and Y0
Activates upon	Tank discharge hose disconnected, low pressure in tank, or high temp fault (190° F at hood)

MICRO-SWITCH LAYOUT

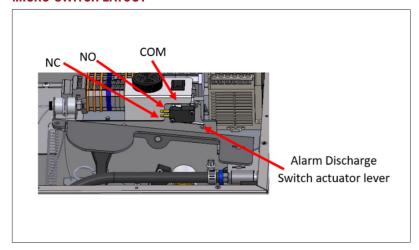

LOCAL ALARM SPECIFICATIONS

Туре	Dry Contact
Type of Contacts	Com / NO
Contact Amperage	5 Amps
Location	PLC contacts C1 and Y1
Activates upon	Low pressure in tank, and high temp fault (190° F at hood)


MICRO-SWITCH SPECIFICATIONS

Туре	Dry Contact
Type of Contacts	Com / NO / NC
Contact Amperage	15 Amps
Location	Above tank actuation paddle
Activates upon	Mechanical discharge of the tank



SUPPRESSION TANK: -TANK-FC/SA (D1000)

UNIT DIMENSIONS

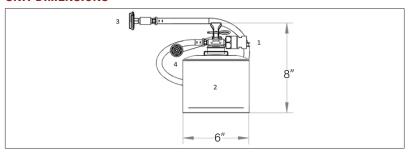


1	Tank is Equipped with a Pressure Switch which opens on discharge.
2	Tank is of Stainless Steel Construction.
3	Visual Pressure Gauge.
4	Discharge Hose with Quick Connect fitting attached.


FC SPECIFICATIONS

Туре	Self Contained Fire Suppression System
Compliance	UL-1995
Mounting Configuration	Integral to the hood
Weight	9.4 lbs
Vessel	Stainless Steel
Chemical Type	Amerex 660
Volume	1300 mL
Chemical Weight	2.2 lbs
Pressure (PSI) +-8%	102 PSI
Height	8 in
Width	6 in

NOZZLE PLACEMENT (PRE-INSTALLED IN HOOD)

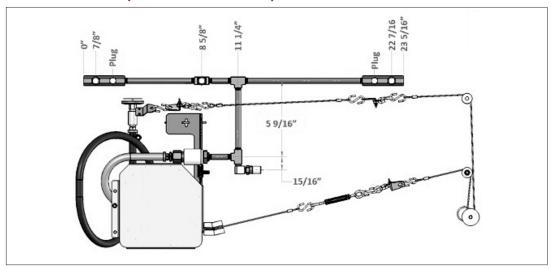

TANK LOCATION

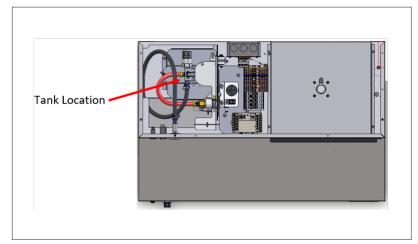

SA SPECIFICATIONS

Туре	Self Contained Fire Suppression System
Compliance	UL-1995
Mounting Configuration	Integral to the hood
Weight	9.4 lbs
Vessel	Stainless Steel
Chemical Type	Amerex 660
Volume	1300 mL
Chemical Weight	2.2 lbs
Pressure (PSI) +-8%	Charge to 102 PSI on site
Height	8 in
Width	6 in

